

## GOLDEN RULES FOR RODS & MORTAR INSTALLATION

### Golden Rules - essential guidelines that need to be considered prior to preparation of the opening and before beginning installation of glass blocks.


- ✓ Glass block walls are self supporting, but not load bearing. Therefore similar to doors & windows, support above should be provided in the form of a lintel.
- ✓ For best integral strength, glass blocks should ideally be installed into a four sided pre-prepared opening. This opening can be timber, brick, steel, concrete or block work.
- ✓ Glass blocks expand and contract with temperature change.
- ✓ Glass blocks should not be installed when the surrounding temperature is 5°C and falling or 30°C and rising.
- ✓ Expansion material must be incorporated to the perimeter opening & intermittently between vertical or horizontal joints if a panel exceeds 6m in any direction. Perimeter expansion should be weatherproofed by caulking with silicon and not grouted over with mortar. If grouted the joint is bridged, restricting expansion & contraction & may cause blocks to crack.
- ✓ Openings must be square and perpendicular and made to suit glass block modules. Glass blocks should not be cut like masonry bricks or tiles.
- ✓ Maximum panel size without intermediate support or slip joints is 25m<sup>2</sup> with no single dimension exceeding 6min any direction.



## RODS & MORTAR ACCESSORIES

### PERIMETER EXPANSION JOINTS

Expansion and contraction is one of the most critical aspects of any glass block construction. Expansion joints must be incorporated to the perimeter of all glass block panels.

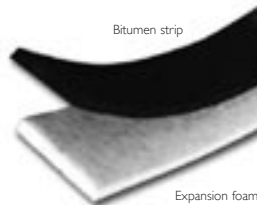


### REINFORCEMENT

Stainless steel ribbed reinforcement rods are used to anchor glass block panels in place and increase integral strength. Reinforcement rods should be anchored into all substrates to a minimum depth of 25mm.




### SPACER PEGS

10mm spacer pegs are available to assist with accuracy of construction and prevent mortar squeeze. When the spacer peg is fitted and the wall is finished, the tabs at the end twist off and this is then grouted over.

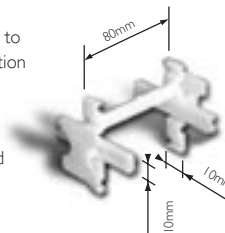

### PANEL ANCHORS

As an alternative to drilling oversized holes, panel anchors can be used.

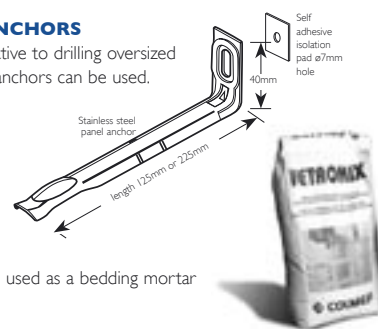


### GLASS BLOCK MORTAR

Colmef Vetromix glass block mortar when constructing brick by brick. Colmef Vetromix is used as a bedding mortar and then by slightly diluting the mix it can be used as a grout for finishing.

## CALCULATING OPENING SIZES

Calculating the opening size accurately is essential because glass blocks should not be cut like masonry bricks or tiles. The diagram demonstrates the principle of how to calculate an opening size based on using 190x190x80mm glass blocks and 10mm joints.

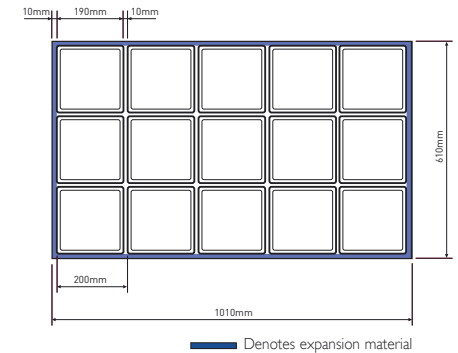

### Calculating opening sizes

- Take the width of the block (eg. 190mm)
- Add the width of the vertical/horizontal joint (10mm)
- Multiply by the number of blocks in the horizontal/vertical course (eg 5 No.) 5 x 200 = 1000mm
- Add one more joint width (10mm) as for 5 blocks you will have 6 joints resulting in 1010mm.

**190mm glass block :**  
**10mm joint :**

190
+ 10
200
x 5
1000
+ 10
1010mm

**Number of blocks :**

**Add sixth joint of 10mm:**

**Minimum opening size :**


EXAMPLE :  
Using 10mm joints

\*The expansion material is incorporated into this measurement.

## CURVED WALLS


### CURVED WALLS

Curved glass block walls can only be constructed using Rods & Mortar installation system. The principle of a curved panel follows the same guidelines as straight glass block walls, except the front vertical joint is opened to form a curve.

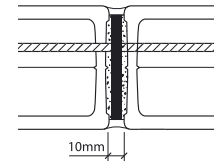

### EXPANSION JOINTS


Perimeter expansion should be allowed for around all four sides of the panel, ensure caulking with silicon weatherproofs this joint and not grouted over with mortar. Where a curve changes plane, a vertical slip joint must be inserted.

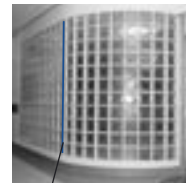


Denotes position of vertical slip joint.

### JOINT SIZES AND MINIMUM RADII

When constructing curved glass block panels, the use of a 10mm internal vertical joint is recommended. Using 190x190x80mm glass blocks, the minimum internal radius of 1650mm will result in the external vertical joint being 18-19mm. Note importance of minimum radius and expansion joints.

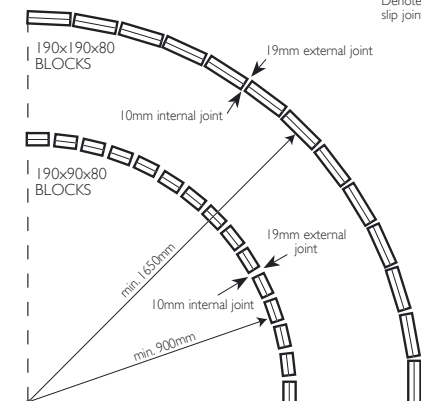


**PREPARATION OF OPENING**

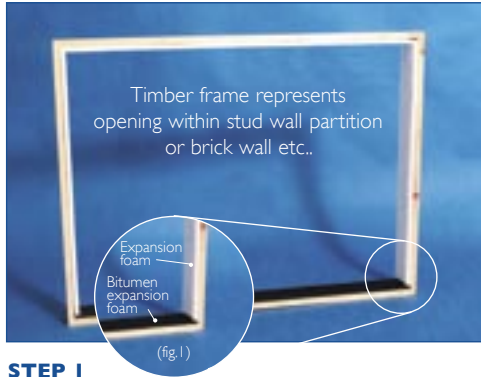

**STEP 1**

Calculate the correct opening size. Make sure the opening is square and perpendicular. Lay bitumen expansion material along base of opening. Secure expansion foam to jambs and head. All four sides of the opening should now be covered in expansion material. Bitumen is necessary on the base to take the weight of the glass block wall.

Timber frame on images represents a perimeter opening; this can be constructed alternatively out of masonry, brick, stud wall, steelwork.

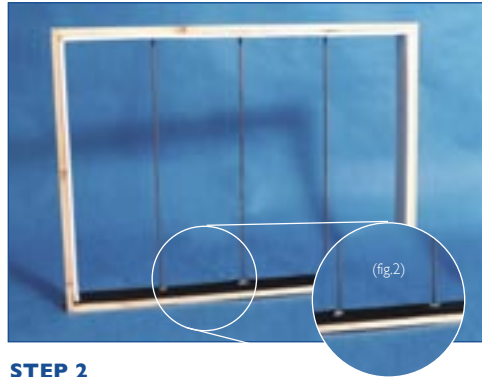


**STEP 2**

Set out dry your first row of glass blocks to ensure opening size is correct. Mark accurately and drill oversized holes in between the blocks, vertically and horizontally where rods will be positioned. The holes need to be a depth of between 25 – 35mm. Fill holes with silicon and fit vertical bars in place (fig.2). When a horizontal or vertical joint dimension exceeds the length of a stainless steel re bar, overlap two by 150mm & tie loosely using stainless tie wire.

Panel anchors can be used as an alternative to drilling oversized holes and are an ideal alternative to drilling holes if the opening is a metal box section or steel I & H beam etc.

**BUILDING THE PANEL**

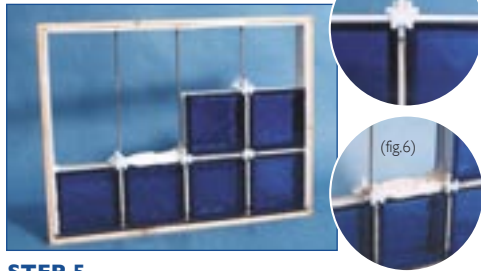


**STEP 5**

Repeat Step 4 until you have completed the first row. Insert spacer pegs in between blocks; this prevents steel rods from touching glass, assists with accuracy of vertical & horizontal joints whilst preventing mortar squeeze, enabling more courses to be constructed (fig.5).

After the first course is complete, if left & allowed to set it will make building subsequent rows easier due to building off a firm bed. Lay half the quantity of mortar and fix the horizontal rod in position, not forgetting to put silicon in the holes, and then cover over the rod with remainder of mortar (fig.6). Rods have to be positioned every row vertically and horizontally.

If using a 'U' channel, two stainless steel reinforcement rods are required around the perimeter.

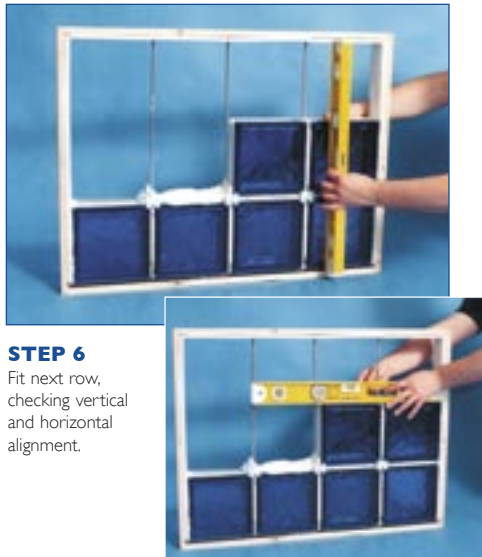

**STEP 6**

Fit next row, checking vertical and horizontal alignment.

**INITIAL CLEAN AND AFTER CARE MAINTENANCE**

Do not deal with any acidic products, the best product for cleaning is water. Polish each block with a soft cloth using good old elbow grease. **Note :** Clean face of block as work proceeds. The glass block installer should have left the glass block wall in a clean, unblemished condition. Requiring only periodical cleaning to maintain an excellent appearance. However, there may be a residue of cement on the glass surface left from mortar/tiling grout identified by whiteish bloom when dry. This may be removed by use of proprietary cement stain remover: (BAL HD Tar Cleaner)


**LAYING FIRST COURSE**



**STEP 3**

Mix ColmefVetromix glass block mortar following instructions on reverse of bag (fig.3). The mix should be a semi dry consistency (Slump 1 or less). Lay down a bed of mortar.

- ✔ It is advised to construct the first course and allow this to initially cure so that on returning to build consecutive courses it becomes easier building a firm bed. In ideal circumstances around 6-8 courses before the panel will wobble to much, dependent on the panel width. Spacer pegs assist with stability but back shuttering could be considered for additional support. At this point it is advised to stop building and allow the panel to set prior to completing construction.
- ✔ For loose build of glass blocks ensure enough time is set aside to fully build.

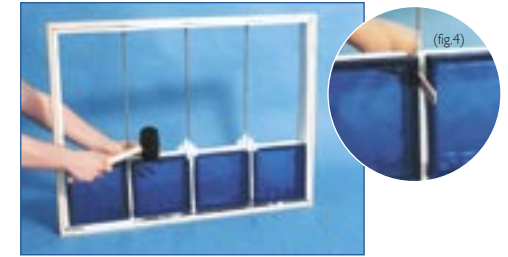

**STEP 4**

Fit first block and tamp down gently, fit second block and repeat. Ensure there is enough mortar between the blocks and the base to create sufficient adhesion, compact the vertical mortar joint using a wooden instrument (fig.4) Note: Spacer pegs are not necessarily required between base and first row of blocks. When using spacers at the base or up the side jambs cut the legs of the cross spacer pegs to form a T shape.

**FINISHING THE GLASS BLOCK PANEL**



**STEP 7**

When the wall has set, snap off spacer tabs and grout all joints with diluted Colmef mortar.

**SEALING AND WEATHERPROOFING THE PANEL**



**STEP 8**

Rake back and mastic around perimeter of expansion foam to create weatherproof seal and prevent bridging which can restrict expansion and contraction of overall panel.

- ! Restriction can result in block cracking